

# SCOPE /SDK

Version 4.0

## Installation Guide

---

CreamWare Audio GmbH  
Wilhelm-Ostwald-Strasse 0/K2  
53721 Siegburg  
Germany  
Tel.: (+49) 2241-5958-0  
Fax: (+49) 2241-5958-5  
Hotline: (+49) 2241-5958-12

> [Main Table of Contents](#)

# SDK Software Installation

The installation of the software is accomplished easily by means of a Windows setup utility.

It is possible that the instructions that follow deviate slightly from the actual installation procedure. Before proceeding, check the README file under 'Last Minute Information' for possible changes to the installation procedure.

To install the SDK software:

1. Insert the software CD-ROM disc into your CD-ROM drive.
2. Close any programs that may be running.
3. In Windows Explorer, switch to the CD-ROM drive and doubleclick on '**setup.exe**' in the root directory.

You can also start the setup program by typing `<CD-ROM drive letter>:\setup.exe` in the **Start menu's 'Run' utility** (i.e. `D:\setup.exe`).

Click Next to start the installation.




4. Select the appropriate language to use.




*This choice determines which language will be used during the setup and whether the German, English or French manual will be installed!*

5. A window appears, in which the Creamware software license agreement is presented. Read this information carefully; then click on '**Accept**' to indicate your agreement with the terms

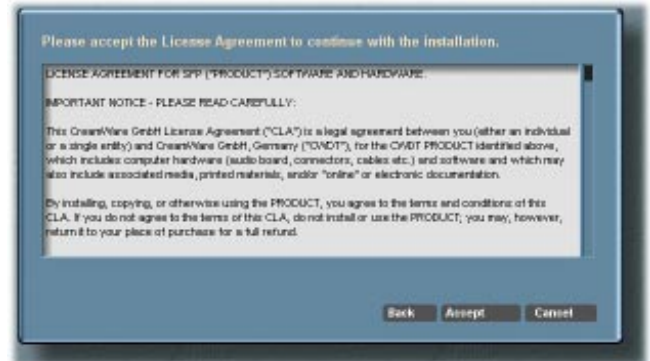

of the license.

6. The following dialog will once again recommend that you read the **ReadMe** file. This file contains important information regarding update issues, as well as other very useful information. It

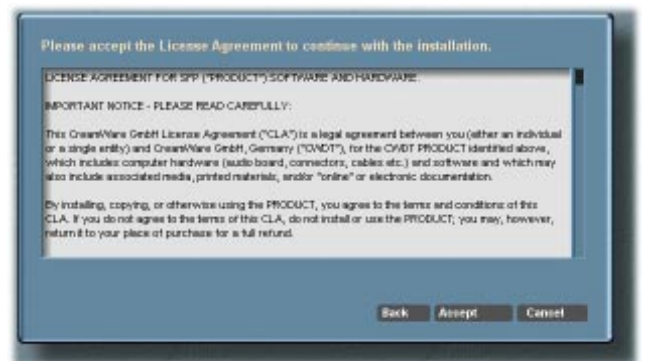

has been provided as an HTML document which you can read using your Web browser. Continue with the installation once you have read this file.

7. If Windows did not detect your Creamware DSP board, and therefore did not install the driver, you have the option now of running the driver

installation. Or, if you are upgrading to a newer version of the software, you should use this option to upgrade the driver. If you choose to do so, follow the given instructions.


If you install the new driver at this point, Windows will prompt you to restart the computer at the completion of the driver installation. If you do this, then you must run **Setup** again after the computer restarts.



**TIP:** Ignore the Windows request to restart the computer. Instead, use the **Restart** option in the CreamWare driver installation dialog. This way the software installation process resumes automatically when Windows restarts.



**8.** In the dialog „Please select destination folder“ you can choose the directory in which to install the software. If you don't like the default selection (C:\SDK - recommended) click **Browse** to select a target drive and directory of your choice.

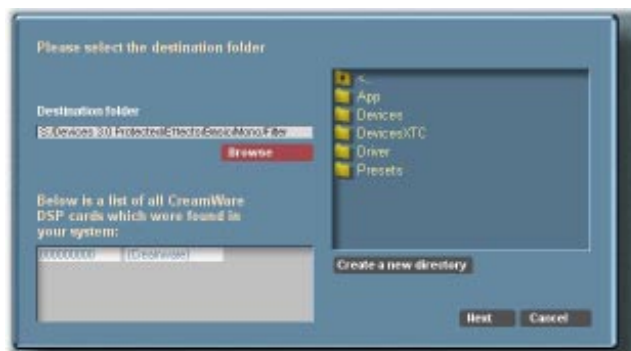


Choose an existing destination folder, or create a new one by entering it directly

in the **Target** text box. Please name the directory **SDK**. Use the scrollbars to navigate the directory window. Click the **Up one level** directory symbol (up-pointing arrow) to navigate to the next higher directory level. Click **New Folder** to create a new directory at the current level. To rename a directory, click on its name text to enable edit mode, or press **F2** to edit a selected directory (press Enter after editing the name). Click **Next** to continue.



Do not include any blank spaces in the directory name!

**9.** In the dialog "Select a package to install", you should select your product. The content of the key list displayed at right will vary depending upon the product you select. Enter the appropriate key for each product you wish to install. This can be done in various ways as described below:

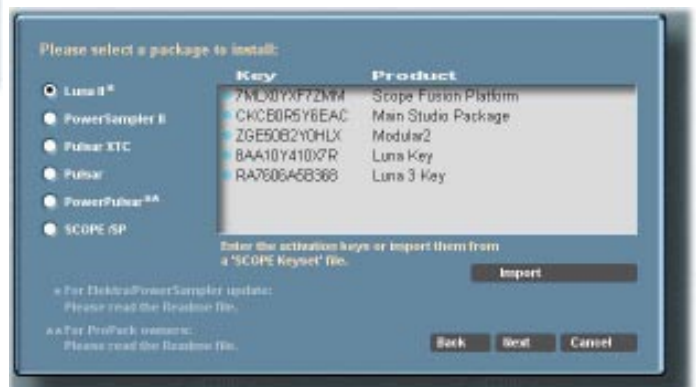

### 1.) Enter activation keys manually

Select a field displaying the text **<enter key>** and, for each field as required, enter the corresponding activation key. The required keys are located in the front of the installation guide.

For each key, press **Enter** to confirm. Proceed as above for all indicated package keys (you can also use the Windows copy/paste function). Note that

0 = zero. When you have finished entering all the required keys, click **Next**.

## 2.) Import

When you register your product at our Internet site (<http://www.creamware.com> -> Registration) a personal page (My page) is created for you. This page contains a file named **allkeys.skf** in the **Activation keys** section containing all the keys required to enable the components you have purchased. Download this file and store it in a directory of your choice (for example, `..\Personal files`). Click **Import** and supply the location of the **allkeys.skf** file and confirm by clicking **OK**.

For products without XTC functionality, such as Luna or PowerSampler, the installation program now starts automatically. If you are installing a Pulsar, Pulsar XTC, PowerPulsar or SCOPE /SDK package, a dialog appears asking you to supply the VST Plug-in directory.

**10. XTC Functionality:** The installation procedure now asks for the location of the plug-in directory in which to install the XTC plug-ins. For Steinberg products the



correct path is already present in the top line.

For products from other manufacturers (Emagic, for example) use **Browse** to select the path for the VST plug-in directory in the second line. Make sure that the directory "Vstplugins" appears

only once in the path (for example, do not specify a path such as `..\Steinberg\Vstplugins\Vstplugins`, which can easily happen as a result of a manual search for the directory). If you do not want to install XTC functionality click **Deactivate** under both lines. Then



click **Next** to start the actual installation.

**11.** When all the files have been copied the program ends with a notice indicating a successful installation. You can now close the dialog by clicking **Finish** or start the newly installed software immediately



by clicking **Start SDK**.

## Notes:

1. Windows 95/ME/W2000/XP software and driver installation procedures are essentially the same as the Windows 98 procedures, but may differ slightly.

2. If the Creamware hardware is not recognized as 'new hardware' by your system (which can happen, depending on your software/hardware combination) just start the '**Add New Hardware**' wizard from the '**Control Panel**' instead to install the driver (as described in chapter 'Installing the Drivers', starting with step 3.).



*In any case, it is absolutely essential that the driver is installed before you attempt to run the software.*

3. If the driver did not '**take**' (the Creamware hardware is not listed as a '**Sound, video and game controller**' after the driver was supposedly installed) power down the computer, reboot, and install the driver again as above. We have found that Windows/Plug 'n' Play can sometimes require a couple of attempts before the new driver is successfully registered!



***Note:** The Windows2000/XP driver is not a "signed driver". Ignore the reference to this that appears.*

*Along with the software, the manual is also copied to your hard disk during the installation. To view or print the manual, **Adobe's Acrobat Reader** (included) must also be installed on your computer. To install the reader, change to the Acrobat Reader directory and run its **setup** program, following the instructions it gives you. After installing the reader, you can access the SFP manual by following '**Start->SCOPE FUSION PLATFORM -> Manual**'.*

*Also, remember that the manual is always available in the **Help** menu, only a couple of mouse clicks away!*

# Warranty and Disclaimer

CREAMWARE GmbH ("CREAMWARE") warrants this product to be free of defects in materials and workmanship for a period of two (2) years for parts and for a period of ninety (90) days for labor from the date of original retail purchase. This warranty is enforceable only by the original retail purchaser.

To be protected by this warranty, the purchaser must complete and return the enclosed warranty card within fourteen (14) days of purchase.

During the warranty period CREAMWARE shall, at its sole and absolute option, either repair or replace free of charge any product that proves to be defective on inspection by CREAMWARE or an authorized service representative. In all cases disputes concerning the warranty shall be resolved as prescribed by law.

To obtain warranty service, the purchaser must first call or write CREAMWARE at the address and telephone number printed below to obtain a Return Authorization Number and instructions concerning where to return the unit for service. All inquiries must be accompanied by a description of the problem. All authorized returns must be sent to CREAMWARE or an authorized CREAMWARE repair facility postage prepaid, insured, and properly packaged. Proof of purchase must be provided in the form of a bill of sale, canceled cheque, or some other positive proof that the unit is within the warranty period. CREAMWARE reserves the right to update any unit returned for repair. CREAMWARE reserves the right to change or improve the design of the product at any time without prior notice. This warranty does not cover claims for damage due to abuse, neglect, alteration or attempted repair by unauthorized personnel, and is limited to failures arising during normal use that are due to defects in material or workmanship in the product.

ANY IMPLIED WARRANTIES INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE LENGTH OF THIS LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT WILL CREAMWARE BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR OTHER DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING, AMONG OTHER THINGS, DAMAGE TO PROPERTY, DAMAGE BASED ON INCONVENIENCE OR ON LOSS OF USE OF THE PRODUCT, AND, TO THE EXTENT PERMITTED BY LAW, DAMAGES FOR PERSONAL INJURY. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty only applies to products sold in the United States of America or Canada. The terms of this warranty and any obligations of CREAMWARE under this warranty shall apply only within the country of sale. Without limiting the foregoing, repairs under this warranty shall be made only by a duly authorized CREAMWARE service representative. For warranty information in other countries please refer to your local distributor.